


# UPDATING DR. ABE BLANK

1. The download will upgrade your version of Dr. Abe Blank to **v1.02.16**
2. Please download the patch, if you are running a version other than **v1.02.16**
3. To check your version of Dr. Abe Blank, click the system settings icon  to display the image below:

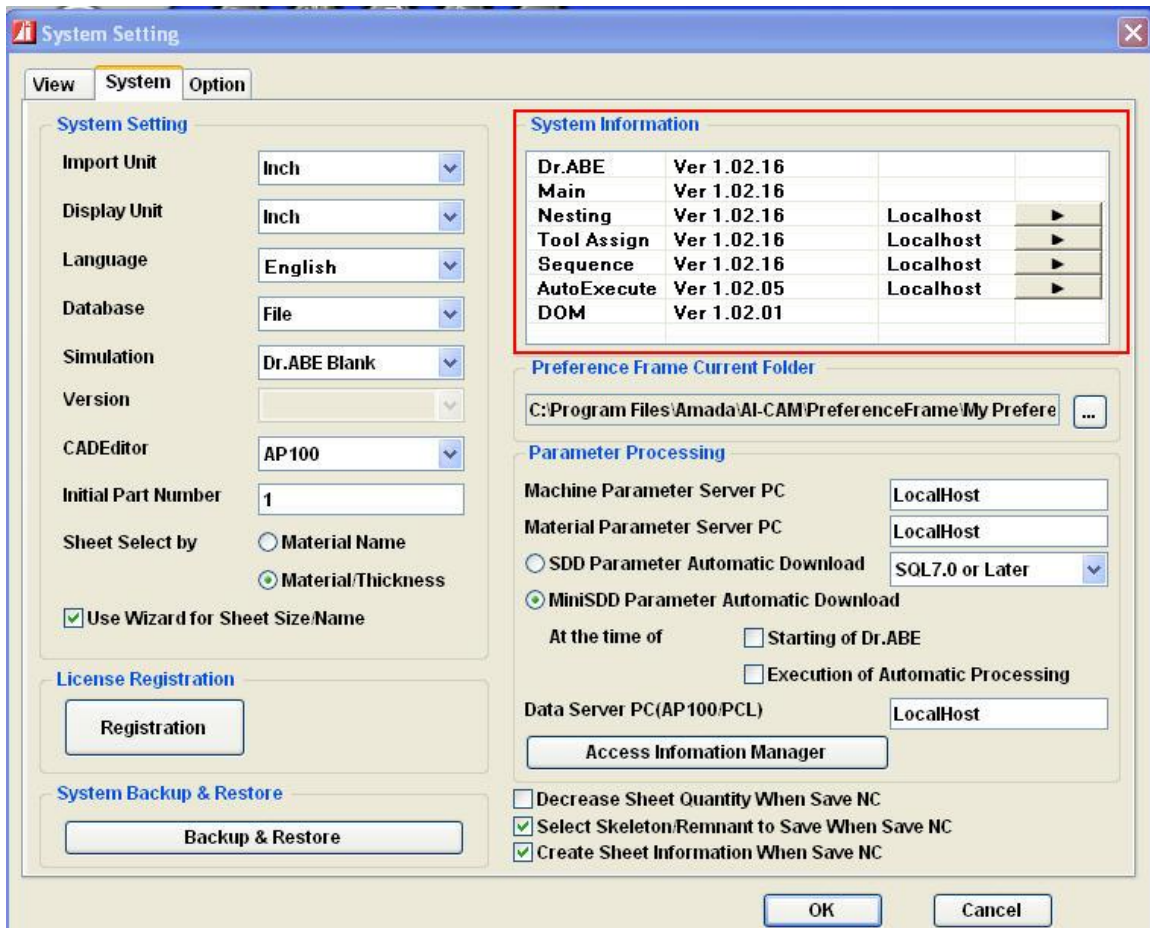


Figure 1

3. Please Download the Update1.02.16.EXE
4. Extract the files **Update.bat** and **Patch1.02.16\_20080728.exe** to **C:\temp**
5. Run (open) the Update.bat to upgrade your application.  
**\*\* Please do not run (open) the Patch1.02.16\_20080728.exe\*\***

6. The following License files will be copied and replaced during the update process

- AIC\_Main.exe.config
- Nflnest.dll
- Radan.Key or Amada.Key

7. Please contact Amada Support for any problems that may occur during the installation of the update. Thank you.